



Hospitality Telephones User Guide

COTELL AURUM SMARTSTATION AURUM AU2080A-E(1S)SP USER GUIDE



Cotell Hotel Phones

Hotel Technology International Limited

167-169 Great Portland Street | London | W1 W 5PF | United Kingdom

T: +44(0)203 405 1200 | E: sales@cotell-emea.com | W: www.cotellhotelphones.com



FEATURES

- 1-line
- Analog
- Surface mount technology with CPU control
- Full length customizable faceplate
- Message waiting indicator lamp
- 1-6 programmable memory button
- High immunity to electro-magnetic radiation
- Gloss or Matt finished high quality plastic casing
- Traditional hook-switch
- Adjustable flash-hook timer
- Handset & speaker volume control
- Ringer volume control
- Redial, hold, mute & flash
- Optional dual +5V/2.1A USB charger Port
- Plastic Base

INSTALLATION

1. Unpack the box and check for the following items:
 - a. Main telephone body
 - b. Base support unit
 - c. Handset
 - d. Handset cord
 - e. Line cord
2. Carefully affix the base support unit to the main telephone body. Connect the USB charger wire to the main body if the said option is chosen.
3. Connect the handset to the telephone using the coiled handset cord provided.
4. Connect one end of the line cord to the telephone RJ11 socket and the other end to the wall telephone outlet.
5. Install the faceplate (delivered separately) onto the telephone.

Cotell Hotel Phones

Hotel Technology International Limited 1167-169 Great Portland Street | London W1W 5PF | UK T: +44(0)203 4051200 |
E: sales@cotell-emea.com | W: www.cotellhotelphones.com



Using the handset

1. Lift up the handset to answer the call.
2. To end the call, place the handset back on the cradle.

Using speakerphone

1. Press the speakerphone button to answer the call.
2. To end the call, press the speakerphone button again. The LED will turn off.

OPERATION

A. Initiating a Call

Using the handset

1. Lift the handset.
2. Listen to dial tone.
3. Press the desired number on the keypad or press a memory button for autodial.
4. To cut off the call temporarily to make another call, press the flash button.
5. To end the call, place the handset back on the cradle.

Using speakerphone

1. Press speaker button. The red LED indicates that the speaker is active.
2. Listen to dial tone
3. Press the desired number on the keypad or press a memory button for autodial.
4. To cut off the call temporarily to make another call, press the flash button.
5. To end the call, press the speakerphone button again. The LED will goes off.

B. Answering a Call

An audible ringing sound and the flashing LED indicates and incoming call

C. Redial

Using the handset

1. Lift up the handset, press the REDIAL button to initial a redial call
2. To end the call, place the handset back on the cradle.
3. To set redial timer;
 - a. Off hook
 - b. Press “**08*# nn”
 - c. Press FLASH button
 - d. On hook

Note: nn = 1 - 60 minutes

Using the speakerphone

1. Press the speakerphone button. The red LED indicates the speakerphone is active, press the REDIAL button to initial a redial call
2. To end the call, press the speakerphone again. The LED will turn off.

D. Speakerphone Volume

1. Adjust the Vol+ or Vol- button to increase or decrease the speakerphone volume.

Cotell Hotel Phones

Hotel Technology International Limited 1167-169 Great Portland Street | London W1W 5PF | UK
T: +44(0)203 405 1200 | E: sales@cotell-emea.com | W: www.cotellhotelphones.com



E. Ringer Volume

1. Flip the Hi-Lo switch below the telephone body to increase or decrease the ring volume.

F. Flash

1. Press the FLASH button momentarily will enable a call transfer.
2. Press the FLASH button for a longer period of time will reactivate a dial tone to make another call.
3. The default timer value is 600ms. To set the timer, Press * # * + Timer value + Flash button. The timer value can be set to 100, 300, 600 or 1000ms. A long "beep" tone confirm the setting is successful.
Example:
 - a. To set 100ms flash timer: Off hook, press "*,#,*,100,FLASH" in sequence. On hook.
 - b. To set 300ms FLASH timer: Off hook, press "*,#,*,300,FLASH" in sequence. On hook.

G. Hold

1. During conversation, press the HOLD button will place a call on hold. The opposite party will hear music.
2. To deactivate the call on hold, press the HOLD button again.

H. Mute

1. During conversation, press the MUTE button will disable the opposite party from hearing your conversation
2. To deactivate Mute, press the MUTE button again.

I. Programmable Memory Button

Shortcut key storage (M1-M6 up to 32 bits)

Storage method 1: "Number + Mn key (press and hold for 3 seconds)" in the on-hook state to return to the standby state.

Storage method 2: In the off-hook state, press the Mn key (long press for 3 seconds), press the number to be stored after hearing the beep, and then press

Mn key, you can hear a long beep, indicating that the number is stored successfully.

Delete method: Press the [Mn] key for 3 seconds in the off-hook state, input * after hearing the beep, and then press the Mn key.

Method 1: Press the Mn key in the off-hook state, and dial out the number set by the key.

Method 2: Press the Mn key in the standby state, and the handset or hands-free off-hook, then the number set by this key will be dialed out.

Detailed description:

- a. Number storage: plug in the outside line of the telephone, press the Mn key for 3 seconds in the off-hook state, and press the key after hearing the beep



the stored number, and then press the selected speed dial service key, the pressed number will be stored in the key. Such as: to

1234 is deposited into the main service desk key, first press the [shortcut key] for 3 seconds, and press 1, 2, 3, 4 after hearing the sound.

Then press the key of the main service desk, then 1234 will be stored in the key of the main service desk.

Note: 1) When storing a new number, the old number is automatically deleted.

2) The length of the number stored in the speed dial service key can be up to 32 digits

J. Message Retrieval

AU2080A (1S) SP-E requires 1 of the 6 memory button to be reserved for message retrieval button. The mail box number will be programmed into this memory location "Message" or "MSG".

When there is an incoming message, the message indicator will light up.

Retrieve a message using the handset

1. Lift up the handset; press the "Message" or "MSG" button to retrieve the message.
2. Once completed, place the handset back on the cradle

Retrieve a message using the speakerphone

1. Press the speakerphone button, the red LED indicates that the speakerphone is active. Press the "Message" or "MSG" button to retrieve the message.
2. Once completed, press the speakerphone again. The red LED will turn off.

K. Clone Function

To clone from originating telephone to destination telephone,
Method A

1. Originating telephone call the destination telephone.

Cotell Hotel Phones

Hotel Technology International Limited 1167-169 Great Portland Street | London W1W 5PF | UK T: +44(0)203 405 1200 |
E: sales@cotell-emea.com | W: www.cotellhotelphones.com



2. Destination phone off hook, press “*#*11*#FLASH/DEL” , once completed, press the SET/STORE key (for 3 seconds) and then press “*#*12*#FLASH” on the originating telephone (will hear a COPY Tone).

All the functions on the originating telephone is copied to the destination telephone.

Method B

1. Both originating telephone and destination telephone are off hook. Press “*#*11*#FLASH/DEL” on destination telephone, once completed, press “*#*12*#FLASH/DEL” on the originating telephone (will hear a COPY Tone).
All the functions on the originating telephone is copied to the destination telephone.

IMPORTANT SAFETY INSTRUCTIONS

WHEN USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS. INCLUDING THE FOLLOWING:

1. READ AND UNDERSTAND ALL INSTRUCTIONS IN THIS MANUAL.
2. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE PRODUCT.
3. UNPLUG THE PRODUCT FROM THE WALL OUTLET BEFORE CLEANING. DO NOT USE LIQUID CLEANER OR AEROSOL CLEANERS. USE A DAMP CLOTH FOR CLEANING.
4. DO NOT USE THIS PRODUCT NEAR WATER FOR EXAMPLE NEAR A BATHTUB, WASH BOWL, KITCHEN SINK OR LAUNDRY TUB, IN A WET BASEMENT, OR NEAR A SWIMMING POOL.
5. DO NOT PLACE THIS PRODUCT ON AN UNSTABLE CART, STAND OR TABLE. THE PRODUCT MAY FALL, CAUSING SERIOUS DAMAGE TO THE PRODUCT.
6. SLOTS AND OPENINGS IN THE CABINET AND THE BACK OF BOTTOM ARE PROVIDED FOR VENTILATION, TO PROTECT IT FROM OVERHEATING, THESE OPENINGS MUST NOT BE BLOCKED OR COVERED. THE OPENINGS SHOULD NEVER BE BLOCKED BY PLACING THE PRODUCT ON THE BED, SOFA, RUG OR ANY OTHER SIMILAR SURFACE. THIS PRODUCT SHOULD NEVER BE PLACED NEAR OR OVER A RADIATOR OR HEAT REGISTER. THIS PRODUCT SHOULD NOT BE PLACED IN A BUILT-IN INSTALLATION UNLESS PROPER VENTILATION IS PROVIDED.
7. NEVER PUSH OBJECTS OF ANY KIND INTO THIS PRODUCT THROUGH CABINET SLOTS AS THEY MAY TOUCH DANGEROUS VOLTAGE POINTS OR SHORT OUT PARTS THAT COULD RESULT IN A RISK OF FIRE OR ELECTRIC SHOCK. NEVER SPILL LIQUID OF ANY KIND ON THE PRODUCT.
8. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT DISASSEMBLE THIS PRODUCT, BUT TAKE IT TO A QUALIFIED SERVICEMEN WHEN SOME SERVICE OR REPAIR WORK IS REQUIRED. OPENING OR REMOVING COVERS MAY EXPOSE YOU TO DANGEROUS VOLTAGES OR OTHER RISKS. INCORRECT REASSEMBLE CAN CAUSE ELECTRIC SHOCK WHEN THE APPLIANCE IS SUBSEQUENTLY USED.
9. UNPLUG THIS PRODUCT FROM THE WALL OUTLET AND REFER SERVICING TO QUALIFIED SERVICE PERSONNEL UNDER THE FOLLOWING CONDITIONS:
 - WHEN THE POWER SUPPLY CORD OR PLUG IS DAMAGED OR FRAYED
 - LIQUID HAS BEEN SPILLED INTO THE PRODUCT.
 - IF THE PRODUCT HAS BEEN EXPOSED TO RAIN OR WATER.

Cotell Hotel Phones

Hotel Technology International Limited 1167-169 Great Portland Street | London W1W 5PF IUK T: +44(0)203 405 1200 I
E: sales@cotell-emea.com | W: www.cotellhotelphones.com



10. IF THE PRODUCT DOES NOT OPERATE NORMALLY BY FOLLOWING THE OPERATING INSTRUCTIONS. ADJUST ONLY THOSE CONTROLS THAT ARE COVERED BY THE OPERATING INSTRUCTIONS BECAUSE IMPROPER ADJUSTMENT OF OTHER CONTROLS MAY RESULT IN DAMAGE AND WILL OFTEN REQUIRE EXTENSIVE WORK BY A QUALIFIED TECHNICIAN TO RESTORE THE PRODUCT TO NORMAL OPERATION.
 - IF THE PRODUCT HAS BEEN DROPPED OR THE CABINET HAS BEEN DAMAGED.
 - THE PRODUCT EXHIBIT A DISTINCT CHANGE IN PERFORMANCE.
11. AVOID USING A TELEPHONE (OTHER THAN A CORDLESS TYPE) DURING AN ELECTRICAL STORM. THERE MAY BE A REMOTE RISK OF ELECTRIC SHOCK FROM LIGHTING.
12. DO NOT USE THE TELEPHONE TO REPORT A GAS LEAK IN THE VICINITY OF THE LEAK. SAVE THESE INSTRUCTIONS

Cotell Hotel Phones

Hotel Technology International Limited 1167-169 Great Portland Street | London W1W 5PF | UK
T: +44(0)203 405 1200 | E: sales@cotell-emea.com | W: www.cotellhotelphones.com



WARRANTY EXCLUSIONS

This warranty does not cover, or may be voided by the followings:

1. Any damage resulting from abuse or misuse (i.e. liquid spills, abuse, or customer's modification (warranty label broken) of the telephone.
2. Any damage caused by failure to follow operating or installation instructions provided with the telephone.
3. New faceplates or damage to the faceplate or discoloration of the telephone.
4. Any damage resulting from improper connection of the telephone to other equipment.
5. A telephone used in a harsh or corrosive environment.
6. Incompatibility with anything other than the PBX for which the telephone was intended during purchased.
7. Cords, connectors and replaceable batteries.
8. Force majeure.
9. Damages in transit.
10. Any damage resulting from unauthorized modification or repair of the telephone.

COTELL PRODUCT SUPPORT

If you need technical assistance with this product, contact Cotell via one of the following methods:

T: +44(0)203 405 1200

E: support@cotell-emea.com

Please contact us should these operating instructions not match the actual telephone.

For sales queries, email: sales@cotell-emea.com

Cotell Hotel Phones

Hotel Technology International Limited 1167-169 Great Portland Street | London W1W 5PF | UK T: +44(0)203 405 1200 |
E: sales@cotell-emea.com | W: www.cotellhotelphones.com